


### 3-3. Using the interior lights

## Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode.

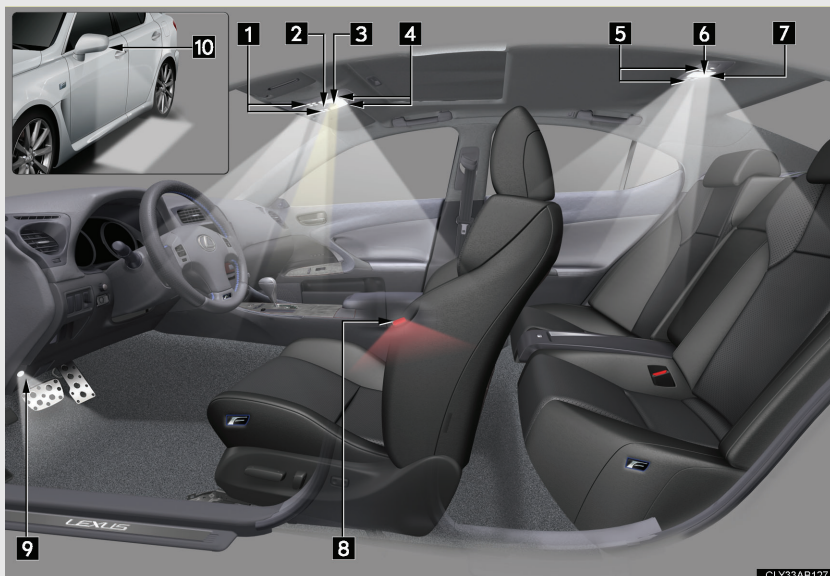

- 1 Front personal lights (→P. 229)
- 2 Shift lever light (when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)
- 3 Front overhead courtesy light
- 4 Front interior light (→P. 229)
- 5 Rear personal lights (→P. 229)
- 6 Rear overhead courtesy light
- 7 Rear interior light
- 8 Front door courtesy lights

#### 9 Front foot well lights

#### 10 Outer foot lights

Turning the instrument panel light control knob fully to the left disables the shift lever light and front foot well lights.

---

#### n **To prevent battery discharge**


If the overhead courtesy lights and interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

#### n **Customization that can be configured at Lexus dealer**

Settings (e.g. The time elapsed before lights turn off) can be changed.  
(Customizable features →P. 428)


## Interior lights

### ► Models without a moon roof

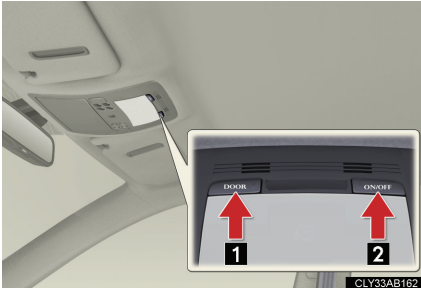

- 1 Door position on/off
- 2 On/off

### ► Models with a moon roof

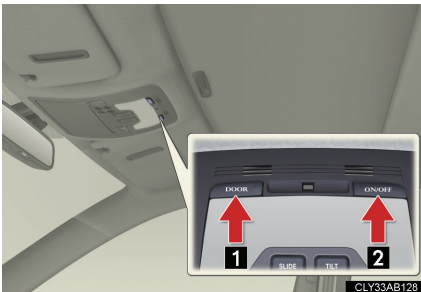

- 1 Door position on/off
- 2 On/off


## Personal lights

### ► Front (models without a moon roof)




On/off

► Front (models with a moon roof)

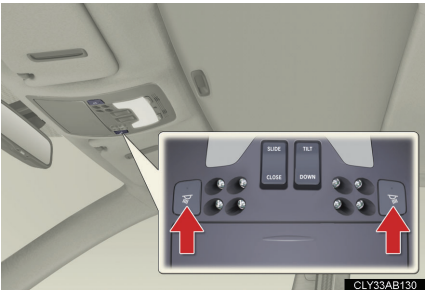

On/off

► Rear

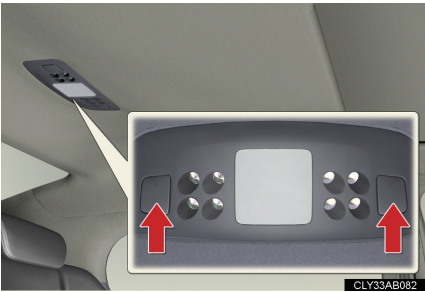

On/off